



UPDATING THE TOOL


- 1 Visit **AutodiagnosTPMS.com** to download the Autodiagnos TPMS software.
- 2 Open the installation file and follow the on-screen instructions to install the software.
- 3 Connect the tool to your PC with the power ON.

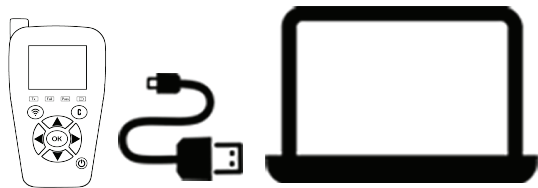


- 4 Open the software, then select the "Update Tool" option.

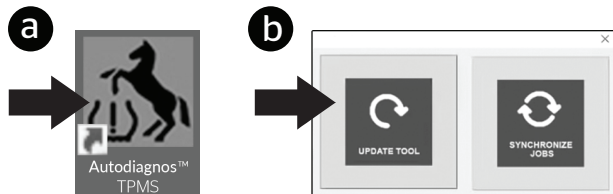

- 5 After 5-10 minutes, the tool will be up-to-date.

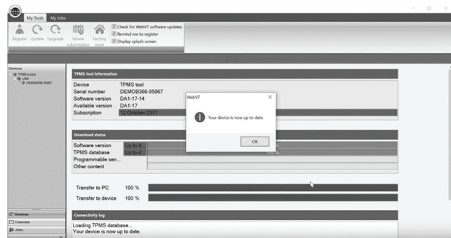


SCANNING SENSORS



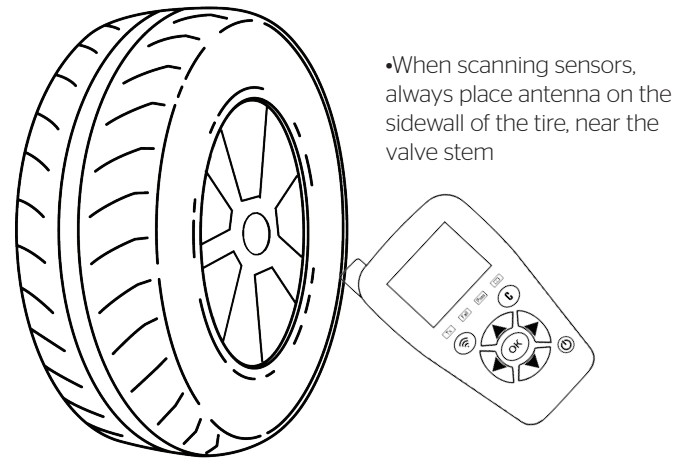



CONNECTING OBDII

- 1 Plug in OBDII Connector into the bottom of the tool with the power ON.
- 2 Plug in opposite end into vehicle's OBDII port with ignition in the ON position.

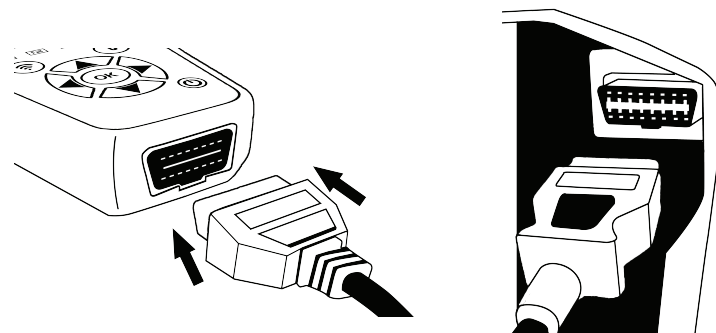

KIT CONTENTS

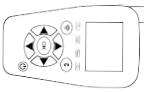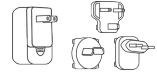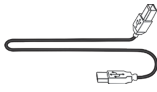1	TPMS SE PN: 29-1000-2417-7-00	
2	Charger & Adapters PN: 29-1000-2417-8-00	
3	USB Cable PN: 29-1000-2418-0-00	
4	OBDII Cable PN: 29-1000-2417-9-00	


CONTACT SUPPORT

Phone: 800-265-1818
 Email: techsupport-us@continental.com
 Web: AutodiagnosTPMS.com

Rev.2 5/2020




Autodiagnos™ TPMS SE

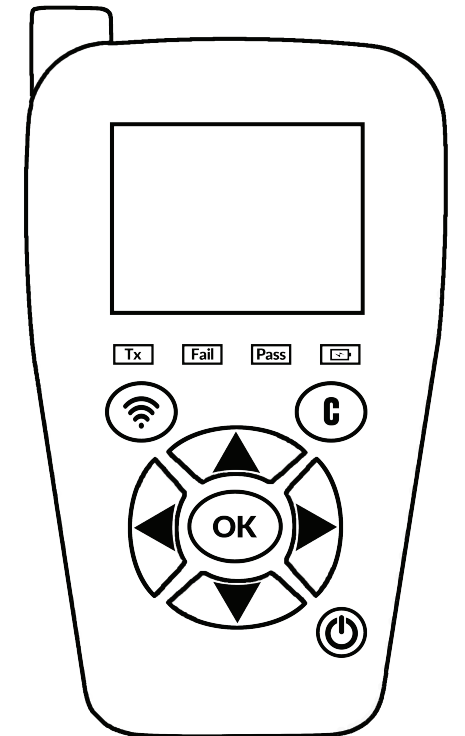


QUICKSTART GUIDE


TOOL CONTROLS

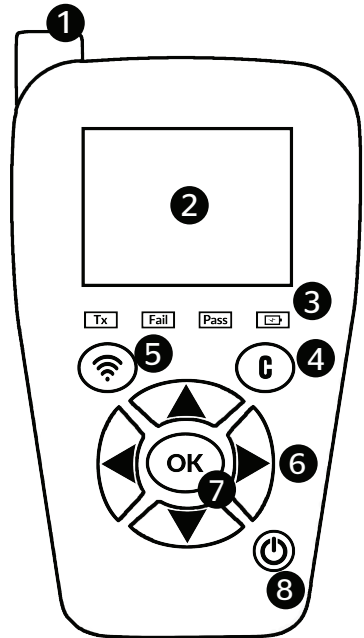

- 1 Antenna
- 2 Display
- 3 Result Lights
 - Triggering
 - Fail
 - Pass
 - Charging
- 4 Cancel Button
- 5 Trigger Button
- 6 Directional Buttons
- 7 OK/Enter Button
- 8 Power Button

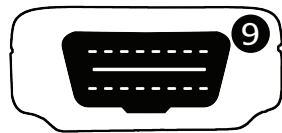

- 9 OBDII Port

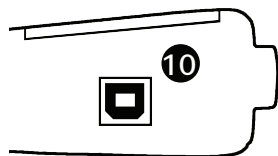


- 10 USB/Charging Port

FEATURES & ICONS




REDI-UNLOCK

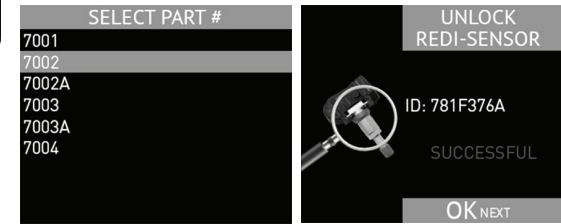

Prepare REDI-Sensors for installation by unlocking them. Unlock with a press of the trigger button.



SERVICE TPMS

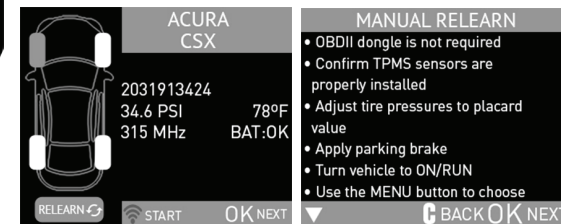


Activate and trigger TPMS sensors. View and perform both manual and OBDII relearn procedures for select vehicles.

FEATURES & ICONS



PROGRAM

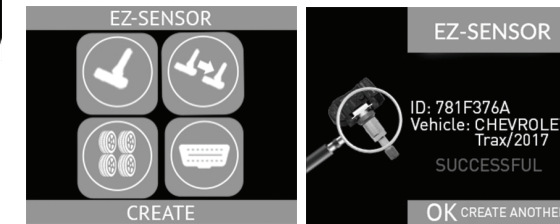

Program Schrader EZ-Sensors in a variety of different ways including create, copy, copy set, and retrieve IDs from ECU.



PART# LOOKUP




View part numbers for OE, REDI, and EZ-Sensor sensors. *Note* Some vehicles may have multiple compatible part numbers.

FEATURES & ICONS




PLACARD ADJUST

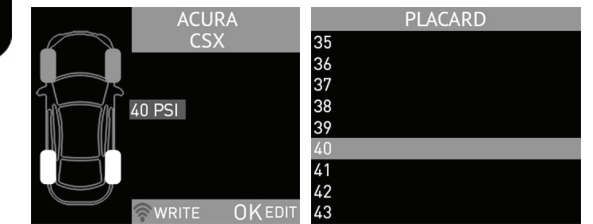

When changing tire sizes or load types. Adjust the internal placard values to match the new set.



SETTINGS/SUPPORT

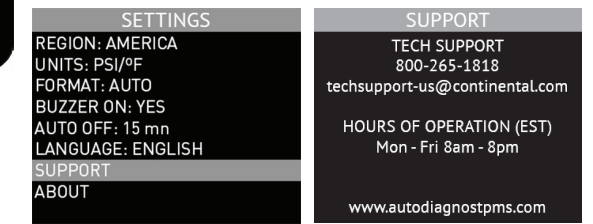

Change a variety of settings including Units, language, and more. Also view tech support information.